


Cut down bottom sweep to width of door on the exterior side and mount to face of door.

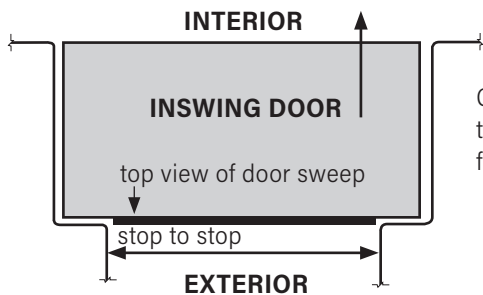

Cut door bottom sweep to width of the opening stop to stop and mount to face of door